


67—410 Remove and install window lifter for rear crank window (coupe)

Remove


1 Remove rear quarter trim panel (67—456).

2 Unscrew cover of the access opening.

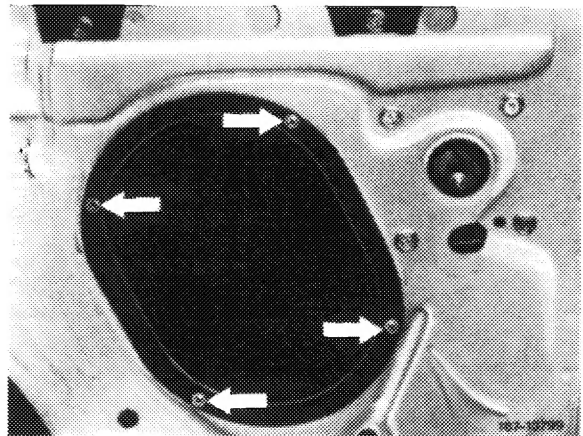

3 Remove lock at the intermediate lever of the window lifter and disconnect intermediate lever at the guide plate.

4 Push quarter window upwards.

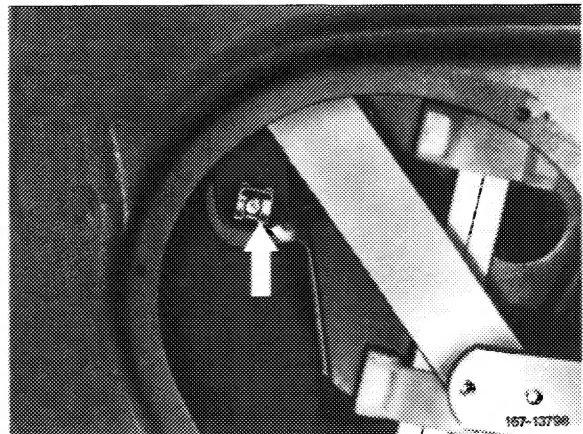

5 Remove screws from window lifter and remove window lifter from the shell via the access opening.

Install

6 Installation takes place in reverse order.

